


## **QUICK START INSTALLATION**

## REMOTE INPUT MODULE

## MAIN CONTROL MODULE

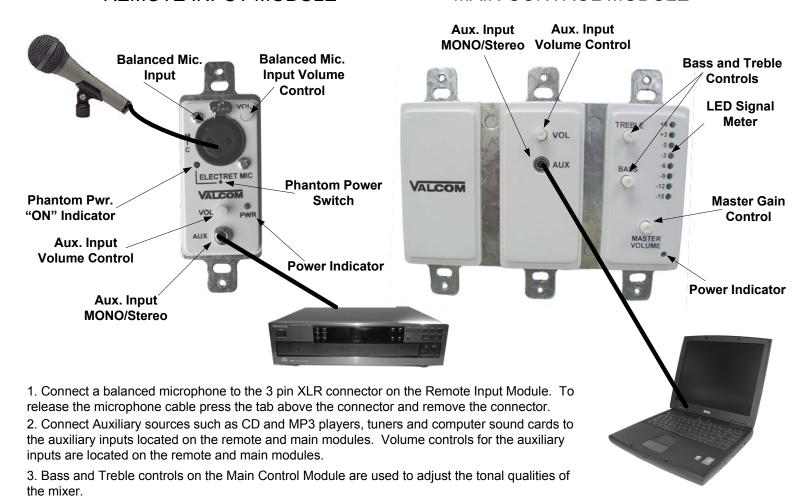

- 4. A Master Volume Control located on the Main Control Module is used to adjust the final volume level of the mixer.
- 5. For additional in-depth information regarding use and setup of the mixer refer to the installation manual.

1 947286

-24VDC

GND




**QUICK START INSTALLATION** 

Using 2 Pair 24AWG Station Cable connect the W/BL pair to the Audio Output of the Remote Module. Connect the W/OR wire to the -24VDC terminal and the OR/W wire to the GND Terminal

On the Main Mixer Module connect the W/BL Pair to the Audio Input terminals for Remote Module Input 1. Connect the W/OR wire to the -24VDC terminal and the OR/W wire to the GND terminal for Remote Module Input 1

When using Valcom Amplified Speakers connect the Speaker Audio Output on the Main Mixer Module to the Tip and Ring connection of the speaker. When connecting Valcom Amplified Horns connect the Horn Audio Output on the Main Mixer Module to the Tip and Ring connections of the Horn.

On the Main Mixer Module connect the -24VDC and GND terminals respectively to the -24VDC and GND terminals on a 24VDC Valcom Power Supply

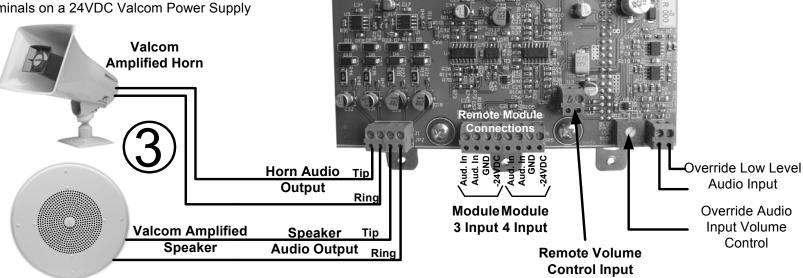

S033287 001

Remote Module

1 Rear View

2 Pair Station

Cable

Module

2 Input

Remote Module

Audio

Output

2 947286